

ENGLISH

Thank you for selecting the LiteBox® series lantern. As with any fine tool, reasonable care and maintenance of this lantern will provide years of dependable service. Please read this manual before using your lantern.

SAVE THESE INSTRUCTIONS. This guide contains important safety and operating instructions for your lantern.

⚠ WARNING Fire and burn hazard. The LiteBox® series produces a powerful beam. When operated for more than a few seconds, it will get hot. Never leave the lantern with its face against any surface, including skin, while in operation. Transport or store the lantern in a way that minimizes the chance it can accidentally be turned on. The resultant heat build-up can cause a fire, burns or damage to the flashlight.

EYE SAFETY

⚠ CAUTION OPTICAL RADIATION (RG-2). DO NOT STARE INTO BEAM. MAY BE HARMFUL TO EYES. PER IEC 62471:2006.

BATTERY SAFETY

⚠ CAUTION EXPLOSION RISK, BURN, AND FIRE HAZARD. DO NOT DISASSEMBLE, CRUSH, SHORT CIRCUIT, HEAT ABOVE 140°F (60°C), OR DISCARD IN FIRE. USE ONLY WITH THE SPECIFIED STREAMLIGHT PRODUCTS. KEEP AWAY FROM CHILDREN. BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY.

The LiteBox® series contains a recyclable Li-Ion battery. At the end of its useful life, under various country and state laws, it may be illegal to dispose of this battery in the municipal solid waste stream. Check with your local solid waste officials for details in your area for recycling options or proper disposal (In USA: RBRC).

CHARGING

The lantern should be fully charged before use. Either plug the charge cord directly into the lantern charge port or insert the lantern into the mounting rack and snap it into place within the locking arms (it must latch securely). Press the release latch and move the lantern forward slightly to remove it from the mounting rack.

The status indicator on the push-button switch will light red when the lantern is inserted correctly, and battery is charging. The status indicator will switch to green when charging is complete. The lantern is designed to be stored in the mounting rack continuously between uses.

MOUNTING RACK INSTALLATION

The mounting rack is designed to be used in many positions. Select a convenient location and make sure there is enough clearance to insert and remove the lantern. Use the mounting rack bottom as a template, mark the location of the mounting holes and install the mounting rack securely with appropriate hardware.

The charge port is located on the side of the mounting rack. Locate a safe, convenient route for the charge cord and connect it to the mounting rack (the charge port is keyed for proper polarity). Connect the charge cord to an appropriate power source.

VEHICLE INSTALLATION

IMPORTANT: Before making electrical connections in a vehicle, keep in mind that a shorted auto battery can easily start a fire. Make all connections with insulated lugs or other connectors intended for such use. Be sure that your installation is fused. A two (2) ampere fuse is recommended.

A 12VDC charge cord (#22051) with a cigarette plug is available for installation of the mounting rack in a vehicle. The cigarette plug can be removed, and the wires can be attached directly to a power source for a more permanent installation. A two-ampere fuse must be used on the positive lead. The striped power lead is positive, and the unmarked lead is negative. When connecting the charge cord to a fuse block, the positive striped power lead goes to the connector that is unpowered when the vehicle's fuse is removed. The mounting rack is electrically isolated from the charge circuit and allows positive ground installations. The lantern is polarity protected and if connected in reverse polarity simply won't charge until connected properly.

Streamlight recommends connecting chargers to an unswitched source of power to ensure the lantern is always fully charged. If the vehicle will not be driven for several days, the lantern should be removed from the mounting rack to avoid vehicle battery drain. Charging the lantern will draw 0.8 amperes for approximately 6 hours and the charger will draw 0.02 amperes in maintenance mode when battery is fully charged.

GENERAL OPERATION

NOTICE Fully charge the battery before first use.

The push-button switch is located on the top of the lantern. Press and release the switch for high mode. Press and hold the switch for one second to access low mode. An additional press of the switch from any mode will turn the lantern off.

Battery charge status indication is as follows:

- Green (lights for 2 seconds after turning lantern on) - Battery is normal/charged.
- Red (lights and stays on) - Charge battery soon.
- Flashing Red (continuous) - Battery is depleted, and shutdown is imminent.

FireBox® Model

The taillight operation of the FireBox® can be changed with the push-button switch. Taillight modes are flash (factory default), on, or off. Press and hold the switch for approximately 4 seconds. While the switch is depressed, the lantern will advance to the next mode and then will turn off.

Power Failure Model

The Power Failure model is designed to turn on when external AC power is lost. Store the Power Failure LiteBox® in the mounting rack with the AC charge cord plugged in. Should the external

power be lost, the lantern will illuminate automatically. Remove the lantern from the mounting rack to turn it off.

PRODUCT USE

Streamlight flashlights are intended for use as high intensity, heavy duty, and portable light sources. Use of Streamlight flashlights for any purpose other than as light sources is specifically discouraged by the manufacturer. Streamlight specifically disclaims liability for other than recommended use.

NOTICE

Be sure to use only genuine Streamlight replacement parts to ensure product safety. Substitution may invalidate the product approval. Do not try to repair the unit yourself. Send to a qualified service facility or return it to the factory.

Streamlight Limited Lifetime Warranty

Streamlight warrants this product to be free of defects for a lifetime of use except for batteries and bulbs, abuse, and normal wear. We will repair, replace, or refund the purchase price of this product should we determine it to be defective. This limited lifetime warranty also excludes rechargeable batteries, chargers, switches, and electronics which have a 2-year warranty with proof of purchase.

THIS IS THE ONLY WARRANTY, EXPRESSED OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES ARE EXPRESSLY DISCLAIMED EXCEPT WHERE SUCH LIMITATION IS PROHIBITED BY LAW. You may have other specific legal rights which vary by jurisdiction.

Go to www.streamlight.com/support for a complete copy of the warranty. To register your product, go to www.streamlight.com (Online Product Registration). Retain your receipt or any proof of purchase.

SERVICE OPTIONS

The LiteBox® and FireBox® contain few or no user-serviceable parts.

For service options, go to www.streamlight.com/support/service and complete the Online Service Request for factory service or to find the location of an authorized Streamlight repair center near you.

Or contact:

Customer Service
STREAMLIGHT, INC.
30 Eagleville Road
Suite 100
Eagleville, PA U.S.A. 19403-3996
Phone: (800) 523-7488 Toll-Free / +1 (610) 631-0600
Fax: (800) 220-7007 / +1 (610) 631-0712

available at **BrightGuy.com**



